APPLIQUES & ONLAYS

installation instructions

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear proper protective gear.

Follow fixture, power tools, paint manufacturers' instructions, and users manuals.


Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST	SPECIAL INSTRUCTIONS AND NOTES
□ Construction adhesive	
□ Caulk	It is highly recommended that you paint/finish our appliques with 100%
☐ Caulking gun	acrylic latex paint before you install them. Once installed, you can apply
□ Nail gun	 any necessary touch-up paint/finish. Clean installation surface and back of appliques of all dirt and dust with a
☐ Finishing nails	clean cloth or sponge.
□ Extra fine sandpaper	 Make sure that the surface and the back of the applique are completely dry before attempting installation.
□ Paint	Serior attempting installation.

STEP BY STEP INSTRUCTIONS

- Lay the applique face down on a soft surface that will not scratch/dent the applique detail.
- 2. Apply a 1/2" bead of adhesive caulk all the way around the back edge of the applique.
- When pressing the applique up against the surface, some adhesive caulk will seep out. Smooth excess caulk around the applique with a finger or the putty knife and apply extra caulk that is needed to fill in any gaps.
- 4. Wipe off any excess caulk with a sponge or damp rag.
- Larger appliques will need to be installed with nails in addition to the adhesive.

EXAMPLE INSTALLATION DIAGRAMS

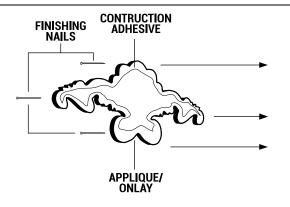



Got Questions, We Can Help. Call 877-268-7770

Email: contact@fineartdeco.com

Web: fineartdeco.com

The Hand Painted Architectural Products Superstore · Since 2003